



MASSARELLI'S®

MAKERS OF FINE STONE GARDEN ACCENTS

SET UP INSTRUCTIONS

3449 TWO TIER FLUTED FOUNTAIN

3459 63" TWO TIER DISTRESSED SCROLL FOUNTAIN

Open bag containing the pump kit **P29009**. In the kit you will find:

- | | |
|---|----------------------|
| 1 – KING 400 (400 gallon per hour pump) | 1 - rubber stopper |
| 1 - 28" long piece of 3/4" clear tubing | 1 – hose clamp |
| 1 - 28" long piece of 1" clear tubing | 1 - tube of silicone |

1. Place pedestal on a firm level surface where fountain will remain. Place the largest shell on the pedestal.
 2. Find the pump and the piece of 3/4" clear tubing 28" long. Attach one end of the 3/4" clear tubing onto the outlet side of the pump with the hose clamp.
 3. Place pump into the pump house located in center of the largest shell and run the plug end of the electrical cord down the PVC pipe located in the pump house and down thru the pedestal. Retrieve cord from under pedestal and place in groove in bottom of pedestal. Slip the rubber stopper onto the power cord with the smaller end facing away from the pump. Insert the rubber stopper snugly into the PVC pipe. Make sure the pump is seated on the bottom of the pump house. Adjust position of the rubber stopper on the power cord if necessary.
 4. Position the largest shell on pedestal and level. To level shell, place level on top rim of the pump house in the center of shell. Level in (2) Two directions left to right and front to back. **Shim as needed.**
 5. Find the second shell and run the 3/4" clear tubing up thru the PVC insert in the center housing of the shell. Position this shell on top of the large shell and level. To level shell, place level on center housing in center of shell. Level as stated in step #4.
 6. Before you trim the 3/4" clear tubing to length. Push the 3/4" clear tubing back down until the pump is resting on the bottom on the pump house.
- If you have fountain,**
- 3449 2-TIER FLUTED FOUNTAIN** trim the tubing 9" above the center housing of the second shell.
- 3459 63" 2-TIER DISTRESSED SCROLL FOUNTAIN** trim the tubing 11 1/2" above the center housing of the second shell.
7. Find the finial. Slip the finial onto the 3/4" clear tubing located in the center of the second shell. Position the finial on the fountain.
 8. Find the drain plugs and insert them snugly into the drain insert located in the large shell. Remove any tape and or dirt from inside the drain insert before you insert the drain plug.
 9. Fill shells with tap water and plug pump into a 110VAC GFCI protected outlet. To adjust the water flow to the finial, unplug the pump and remove the finial from the fountain. Trim the 3/4" clear tubing another 1/2" shorter and reposition the finial on the fountain. If necessary repeat by cutting the 3/4" clear tubing another 1/2" shorter. This will regulate water flow from the finial until the desired result is achieved.

10. **3449 TWO TIER FLUTED FOUNTAIN** How to apply the clear silicone. Apply about a 1/2" line of silicone on the tip of your index finger. On the very bottom of the drip edge, where the water drips from the bowl, touch your index finger to the drip edge and pull straight down. This will leave a dab of silicone on the drip edge to break the film of the water and allow the fountain to drip straight down.

3459 63" TWO TIER DISTRESSED SCROLL FOUNTAIN How to apply the clear silicone. Apply a thin layer of silicone around the bottom edge of the smaller shell. Apply more silicone with your fingertip. Using a dabbing motion touch the edge of the smaller shell with your finger and pull straight down leaving small strands of silicone around the bottom edge of the smaller shell. Continue around the bottom edge of the smaller shell.

3449sup 3/4/11