



# MASSARELLI'S®

MAKERS OF FINE STONE GARDEN ACCENTS

## SET UP INSTRUCTIONS

### 3462 – 80" IMPERIAL SCROLL FOUNTAIN

Open bag containing the pump kit **P95008**. In the kit you will find:

1 – 02720 (950 gallon per hour pump)	1 – 1 1/4" X 3/4" Reducer Bushing	1 – rubber stopper
1 – 3/4" clear tubing 1 1/2" long	1 – 3/4" Thread Barb Adaptor	1 – hose clamp
1 – 1" clear tubing 11 3/4" long	1 – 1 1/4" coupling	1 – tube of silicone

1. Prepare a level base of 4" poured concrete or 6" compacted crushed limestone. The fountain pool has an outside base diameter 72".

2. Find the 1 1/4" X 3/4" Reducer Bushing and the 3/4" Barb Adaptor. Screw the threaded male end on the 3/4" Barb Adaptor into the threaded female end of the 1 1/4" X 3/4" Reducer Bushing. Find the 1 1/4" coupling. Apply silicone (or use PVC pipe glue) inside one end of the 1 1/4" coupling. Insert the slip end of the 1 1/4" X 3/4" Reducer Bushing into the end on the 1 1/4" coupling until it bottoms out. Find the piece of 3/4" clear tubing 1 1/2" long and slip it all the way onto the barbed end of the 3/4" Barb Adaptor. Find the piece of 1" clear tubing 11 3/4" long and slip it on, all the way, over top of the 3/4" clear tubing. This will be the tubing assembly.

3. Before you position the fountain pool.

**In the center of the fountain pool there is a PVC insert. Remove any tape and clean any dirt from the PVC insert.** Find the pump, the rubber stopper and the tube of silicone. Apply a dab of silicone in the hole of the rubber stopper. Slip the rubber stopper onto the power cord about 24" from the pump. Apply silicone around the inside edge of the PVC insert and the outside edge of the rubber stopper. Place the pump in the center of the pool and run the plug end of the power cord down the PVC insert. Retrieve the power cord from bottom side of pool. Insert the rubber stopper snugly into the PVC pipe in the center of the pool. Apply silicone on top and around the rubber stopper and power cord. **Don't skimp on the silicone you want a watertight seal.**

4. **Retrieve the power cord of the pump from bottom side of the fountain pool and place in the groove in the bottom side of the fountain pool. Position the fountain pool in the center of the area where the fountain is to be displayed and level. Find a board long enough to span the width of the fountain pool to place the level on. Place the level on the board on top of the fountain pool wall and level in all directions.**

5. Find the pump house and position in the center of the fountain pool. Find the urn base and position on top of the pump house. Find the urn top and position on top of the urn base. Find the tubing assembly and connect the end of the 1" clear tubing to the outlet side of the pump with the hose clamp. In the bottom of urn base there is a PVC pipe. Remove any tape and clean any dirt from the PVC pipe. Connect the end of the 1 1/4" coupling onto the 1 1/4" PVC pipe located in the bottom of the urn base. Push the 1 1/4" coupling onto the PVC pipe until it bottoms out. If necessary trim the length of the 1" clear tubing.

6. Find the drain plug and insert snugly into the drain insert located in the pool. Remove any tape and or dirt from the drain insert before you insert the drain plug. Find the pump house plug and position it in the opening in the pump house.

7. Fill the fountain pool with tap water and plug pump into a 110VAC GFCI protected outlet.

3462sup 12/10/14