



MASSARELLI'S®

MAKERS OF FINE STONE GARDEN ACCENTS

SET UP INSTRUCTIONS

3606 – 40" JUBILEE VASE FOUNTAIN

Open bag containing the pump kit **P40015**. In the kit you will find:

- | | |
|---------------------------------------|------------------------------------|
| 1 – 40400 (400 gallon per hour pump) | 1 – 3/4" Barb Adaptor (NPT X BARB) |
| 1 – 3/4" kink free tubing 10" long | 1 – rubber stopper |
| 1 – 3/4" Female Adapter (SLIP X FIPT) | |

1. Find the 3/4" Female Adapter (SLIP X FIPT) and the 3/4" Barb Adaptor (NPT X BARB). Screw the threaded male end of the 3/4" Barb Adaptor (NPT X BARB) into the threaded female end of the 3/4" Female Adapter (SLIP X FIPT). Find the piece of 3/4" kink free tubing and connect one end to the barbed end of the 3/4" Barb Adaptor (NPT X BARB). This will be the tubing assembly.
2. **Before you position the fountain pool.** Find the pump and the rubber stopper. Place the pump in the pump house located in the center of pool. Run the plug end of the power cord down the PVC pipe located in the pump house. Slip the rubber stopper onto the power cord about 18" from the body of the pump. Insert the rubber stopper snugly into the PVC pipe. Retrieve the power cord from under pool and place in groove in bottom of pool.
3. Place the fountain pool on a firm and level area where the fountain will remain. Find the tubing assembly and connect the end of the 3/4" kink free tubing to the outlet side of the pump. Position the pump in the pump house on its side.
4. Find the jubilee urn base and position it on top of the pump house located in the center of pool. In the bottom of the jubilee urn base there is a PVC pipe. Remove any tape and clean any dirt from the PVC pipe. Connect the slip end of the 3/4" Female Adapter onto the 3/4" PVC pipe located in the bottom of the jubilee urn base. Push the adaptor onto the PVC pipe until it bottoms out. Find the jubilee urn top and position it on top of the jubilee urn base.
5. Find the drain plug and insert snugly into the drain insert located in the pool. Remove any tape and or dirt from the drain insert before you insert the drain plug. Find the pump house plug and position it in the opening in the pump house.
6. Fill the fountain pool with tap water and plug pump into a 110VAC GFCI protected outlet. Adjust the water flow using the dial type flow control located on the front of the pump.

3606sup 12/12/14