

SET UP INSTRUCTIONS

3646 THREE TIER SCALLOP FOUNTAIN ON 8FT MODULAR POOL

Open bag containing the pump kit **PMP804**. In the kit you will find:

1 – 02728 (1800 gallons per hour pump)	1 - hose clamp	2 – drain plugs (for pool)
1 - 90" long piece of 1" clear tubing	1cs – SIKAFLEX 1a	1 - capplug

1. Center the round pumphouse cover on the pumphouse located in the center of the modular pool. Place the fountain pedestal in the center of the round pumphouse cover. Find the 1" clear tubing 90" long. Insert the 1" clear tubing in the hole in the center of the fountain pedestal and push it down through the pedestal and into the pump house in modular pool. Connect the 1" clear tubing onto the outlet side of the pump with a hose clamp.
2. Find the largest shell and run the 1" clear tubing up thru the PVC insert in the center housing of the shell. Position this shell on top of the fountain pedestal and level. To level shell, place level on top rim of the center housing in the center of shell. Level in (2) Two directions left to right and front to back. **Shim as needed.**
3. Find the larger spacer that is 8" high. Run the 1" clear tubing through the center hole in spacer. Place spacer on top of pumphouse in center of shell and level as stated in step #2.
4. Find the second shell and run the 1" clear tubing up thru the PVC insert in the center housing of the shell. Position this shell on top of the large spacer and level. To level shell, place level on center housing in center of shell. Level as stated in step #2.
5. Find the smaller spacer that is 5.5" high. Run the 1" clear tubing through the center hole in spacer. Place spacer on top of center housing in center of shell and level as stated in step #2.
6. Find the third shell and run the 1" clear tubing up thru the PVC insert in the center housing of the shell. Position this shell on top of the smaller spacer and level. To level shell, place level on center housing in center of shell. Level as stated in step #2.
7. Find the finial and remove any excess concrete or tape from inside and both ends of the PVC pipe located in the center of the finial. Before placing the finial on the fountain. Cut the 1" clear tubing 12" above the top surface of the center housing on the third shell. Position the finial on top of fountain.
8. Assemble the remainder of the modular pool.
9. Find the drain plugs and insert them snugly into the drain insert located in the two larger shells and the modular pool. **AFTER 24 HOURS** fill modular pool and fountain shells with water and plug pump into a 110VAC GFCI protected outlet. To adjust the water flow to the finial, unplug the pump and remove the finial from the fountain. Cut the 1" clear tubing another 1/2" shorter and reposition the finial on the fountain. If necessary repeat by cutting the 1" clear tubing another 1/2" shorter. This will regulate water flow from the finial until the desired result is achieved.

3646sup 10/10/07