



MASSARELLI'S®

MAKERS OF FINE STONE GARDEN ACCENTS

SET UP INSTRUCTIONS 3776 - OPAL OCTAGONAL FOUNTAIN

Open the bag containing the pump kit **P16018**. In the kit you will find:

1 - 40160 (160 gallon per hour pump)
1 - hose clamp

1 - rubber stopper
1 - 1/2" clear tubing 27" long

1. Place the pedestal on a firm and level surface where fountain will remain and level in all directions. Place the largest shell on the pedestal.
2. Find the pump, the piece of 1/2" clear tubing 27" long, the rubber stopper and the hose clamp. Place the pump in the pump house located in the center of the large shell and run the plug end of the electrical cord down the PVC insert in the pump house and down hole that is in the pedestal.
Retrieve the power cord from under pedestal and place in groove in the bottom of the pedestal. Slip the rubber stopper onto the power cord about 10" from the pump. Insert the rubber stopper snugly into the PVC insert.
Attach one end of the 1/2" clear tubing onto the outlet side of the pump with the hose clamp.
Adjust the dial type flow control located on the front of the pump to the full open (+) position.
4. Position the large shell on pedestal and level in all directions.
5. Find the second shell and run the 1/2" clear tubing up thru the hole in the center housing of the shell. Position the shell centered on top of the pump house located in center of large shell.
6. Find the finial. In the center of the finial you will see a PVC pipe. Clean any excess concrete and or tape from this PVC pipe. Trim the 1/2" clear tubing 1/2" shorter than the height of the finial. Insert the 1/2" clear tubing into the PVC pipe in the bottom of the finial and slide the finial down onto the center housing of the second shell. Position the finial on the fountain.
7. Find the drain plug and insert snugly into the drain insert located in the large shell. Remove any tape and or dirt from the drain insert before you insert the drain plug. Find the pump house plug and position in the opening in the pump house.
8. Fill shells with tap water and plug pump into a 110VAC GFCI protected outlet. Adjust the water flow to the finial using the dial type flow control located on the front of the pump until the desired result is achieved.

3776sup **5/17/14**