



**MASSARELLI'S®**  
MAKERS OF FINE STONE GARDEN ACCENTS

## 3552 - 70" Classic Lion Head Fountain on 52" Pool



### Fountain Information

- Two people are recommended for the installation of this fountain.

### Fountain Components

- 3346S - 52" Pool
- 8580P - Pedestal
- 3099S - Bottom Shell
- 3151S - Top Shell
- 4879 - Finial

### Pump Kit P460M Includes

- 40460 - 460 GPH Pump
- 9962 - 3/4" Clear Tubing - 65" Long Piece
- 9940 - Rubber Stopper
- Hose Clamp

### Tools Required

- Bubble Level
- Brick or Riser
- Marker or Pen
- Tubing Cutter or Scissors
- Shims (only if leveling is required)

## Set Up Instructions

1. Place the pool on a firm and level area where the fountain will be installed. Place a brick or riser under one side of the pool to help retrieve the pump's electrical cord.
2. Find the pump and the rubber stopper. Place the pump in the pumphouse in the center of the pool. Run the plug end of the pump's electrical cord through the PVC pipe located in the center of the pumphouse and out through the bottom of the pool. Retrieve the cord from under the pool and run the cord through the groove.
3. Find the rubber stopper and insert onto the cord by spreading the slit open. The rubber stopper should be about 12" from the pump. The smaller end of the rubber stopper should be facing away from the pump. Insert the rubber stopper snugly into the PVC pipe until it is flush.
4. Remove the brick or riser from under the pool and level. To level the pool, place the level on the top rim of the pumphouse. Level in two directions. Shim if needed.
5. Find the pedestal and position it on top of the pumphouse.
6. Find the 3/4" clear tubing and run one end down the center of the pedestal. Carefully tilt the pedestal and attach the tubing to the outlet side of the pump using the hose clamp. Position the pedestal back on to the pumphouse and level. Shim if needed.
7. Find the bottom shell and run the tubing through the center housing of the shell. Position the shell on the pedestal. Make sure the tubing is free of any kinks. Place level on the center housing of the shell. Shim if needed.
8. Find the top shell and run the tubing through the center housing of the shell. Position the top shell onto the center housing of the bottom shell. Place level on the rim of the top shell. Shim if needed.
9. The tubing will now be sticking out of the top of the center housing of the top shell. Push the tubing down to make sure the pump is sitting on the floor of the pumphouse. The pump should always be sitting on the pumphouse floor.
10. Trim the tubing 7.5" above the center housing of the top shell. Find the finial and slide it on to the tubing. Position the finial on the center housing of the top shell. Shim if needed.
11. Fill the pool and shells with water. Stop filling when water is visible in the pool and shells.
12. Plug in the pump to your GFCI outlet. Your fountain will start running.
13. You may need to adjust the water flow. To do so use the flow control dial located on the front of the pump.