



MASSARELLI'S®
MAKERS OF FINE STONE GARDEN ACCENTS

3634 - 47" Two Tier Oliveto Fountain



Fountain Information

- Two people are recommended for the installation of this fountain.

Fountain Components

- 8236P - Pedestal
- 3264S - Bottom Shell
- 3264PL - Bottom Shell Plug
- 8238SP - Spacer
- 3266S - Top Shell
- 4829 - Finial

Pump Kit P22514 Includes

- 40225 - 225 GPH Pump
- 9962 - 3/4" Clear Tubing - 48" Long Piece
- 9940 - Rubber Stopper
- Hose Clamp

Tools Required

- Bubble Level
- Marker or Pen
- Tubing Cutter or Scissors
- Shims (only if leveling is required)

Set Up Instructions

1. Find the pedestal and place it on a firm and level area where the fountain will be installed.
2. Find the bottom shell and position it on top of the pedestal.
3. Find the pump, 3/4" clear tubing, and the rubber stopper. Place the pump in the pumphouse in the center of the bottom shell. Run the plug end of the pump's electrical cord down the PVC pipe located in the center of the pumphouse and runs down through the center of the pedestal. Retrieve the cord from under the pedestal and run the cord through the groove at the bottom the pedestal.
4. Find the rubber stopper and insert onto the cord by spreading the slit open. The smaller end of the rubber stopper should be facing away from the pump. Insert the rubber stopper snugly into the PVC pipe until it is flush.
5. Find the 3/4" clear tubing and attach it on the outlet side of the pump and secure with the hose clamp.
6. Place a level on the top rim of the pumphouse to level the bottom shell. Level in two directions. Shim if needed.
7. Find the spacer and run the tubing through the center hole and position the spacer on top of the pumphouse located in the bottom shell. Place a level on the spacer. Shim if needed.
8. Find the top shell and run the tubing through the center housing of the shell. Position the top shell on top of the spacer.
9. The tubing is now sticking out of the top shell. Push the tubing down to make sure the pump is sitting on the floor of the pumphouse. The pump should always be positioned on the floor of the pumphouse.
10. Trim the tubing 11" above the center housing of the top shell.
11. Find the finial and slide it onto the tubing. Position the finial on the center housing of the top shell. Shim if needed.
12. Fill the shells with water. Stop filling when water is visible in the shells.
13. Plug in the pump to your GFCI outlet. Your fountain will start running.
14. You may need to adjust the water flow. To do so use the flow control dial located on the front of the pump.