



3871 - 59" Isabella Cherub Fountain



Fountain Information

 Two people are recommended for the installation of this fountain.

Fountain Components

- 8740PH Pedestal Pumphouse
- 8740PL Pedestal Pumphouse Plug
- 8723SP Spacer
- 3172S Shell
- 3172PL Shell Plug
- 7594 Cherub

Pump Kit P16005 Includes

- 40160 160 GPH Pump
- 9961 1/2" Clear Tubing 8" Long Piece
- 9940 Rubber Stopper
- Hose Clamp

Tools Required

- Bubble Level
- Marker or Pen
- Tubing Cutter or Scissors
- Tubing cutter or seissors
- Shims (only if leveling is required)

Set Up Instructions

- Find the pedestal pumphouse and place it on a firm and level area where the fountain will be installed.
- $2. \mbox{\rm Find}$ the pedestal and place it on top of the pedestal pumphouse.
- 3. Find the shell and place on top of the pedestal.
- 4. Find the pump, 1/2" clear tubing, and the rubber stopper. Place the pump in the pumphouse in the center of the shell. Run the plug end of the pump's electrical cord down the PVC pipe located in the center of the pumphouse and runs down the center of the pedestal. Retrieve the cord from under the pedestal and run the cord through the groove at the bottom the pedestal.
- 5. Find the rubber stopper and insert onto the cord by spreading the slit open. The smaller end of the rubber stopper should be facing away from the pump. Insert the rubber stopper snuggly into the PVC pipe until it is flush.
- 6. Find the 1/2" clear tubing and attach it on the outlet side of the pump and secure with the hose clamp.
- 7. Place a level on the top rim of the pumphouse to level the shell. Level in two directions. Shim if
- 8. Find the Cherub and attach the loose end of the tubing to the copper pipe that is located underneath the base of the Cherub. Trim any excess tubing if necessary. Position the Cherub on the center housing of the shell. Shim if needed.
- 9. Find the shell plug and place it in the opening of the pumphouse.
- 10. Fill the shell with water. Stop filing when water is visible in the shell.

 11. Plug in the pump to your GFCI outlet. Your fountain will start running.
- 12. You may need to adjust the water flow. To do so use the flow control dial located on the front of the pump.