



MASSARELLI'S®
MAKERS OF FINE STONE GARDEN ACCENTS

3879 - 35" Terrace Urn Wall Fountain



Fountain Information

- Two people are recommended for the installation of this fountain.

Fountain Components

- 3411B - Base
- 8837PH - Pumphouse
- 3412S - Urn

Pump Kit P16005 Includes

- 40160 - 160 GPH Pump
- 9961 - 1/2" Clear Tubing - 8" Long Piece
- 9940 - Rubber Stopper
- Hose Clamp

Tools Required

- Bubble Level
- Marker or Pen
- Tubing Cutter or Scissors
- Shims (only if leveling is required)

Set Up Instructions

1. Find the one piece base & wall piece and place it on a firm and level area where the fountain will be installed.
2. Find the pump, 1/2" clear tubing, and the rubber stopper. Place the pump in the base of the fountain. Run the plug end of the pump's electrical cord through the PVC pipe located on the bottom right hand side inside the base. Retrieve the cord from the back of the base.
3. Find the rubber stopper and insert onto the cord by spreading the slit open. The smaller end of the rubber stopper should be facing away from the pump. Insert the rubber stopper snugly into the PVC pipe until it is flush.
4. Find the 1/2" clear tubing and attach it on the outlet side of the pump and secure with the hose clamp.
5. Attach the loose end of the 1/2" clear tubing to the copper pipe on the bottom left hand side inside the base. Trim tubing if needed.
6. Find the pumphouse and position it so that it is covering the pump. The pumphouse should be positioned between the two raised bumpers located on the floor of the base of the fountain. The raised bumpers will hold the pumphouse in place. The top of the pumphouse has two raised bumpers. The bottom of the pumphouse has a cut out that should be facing outwards. The cut out is meant for easy access to the pump.
7. Find the urn and position it on top of pumphouse. The urn should be positioned between the two raised bumpers on the top of the pumphouse. The raised bumpers will hold the urn in place. The flat side of the urn should be flush against the wall of the fountain.
8. Fill the base with water. Stop filling when water is visible.
9. Plug in the pump to your GFCI outlet. Your fountain will start running.
10. You may need to adjust the water flow. To do so use the flow control dial located on the front of the pump.