



MASSARELLI'S®
MAKERS OF FINE STONE GARDEN ACCENTS

3887 - Paloma Fountain on 38" One Piece Pool



Fountain Information

- Two people are recommended for the installation of this fountain.

Fountain Components

- 347238 - 38" One Piece Pool
- 347238PL - Pool Plug
- 3424S - Shell Finial

Pump Kit P22503 Includes

- 40225 - 225 GPH Pump
- 9962 - 27" Long Piece of 3/4" Clear Tubing
- 9940 - Rubber Stopper
- Silicone

Tools Required

- Bubble Level
- Marker or Pen
- Tubing Cutter or Scissors
- Shims (only if leveling is required)

Set Up Instructions

1. Find the one piece pool and place it on a firm and level surface where the fountain will remain. Place a brick under one side of the pool to help retrieve the pump's power cord.
2. Find the pump, 3/4" clear tubing and the rubber stopper.
3. Place the pump inside the pumphouse located in the center of the pool. Run the plug end of the electrical cord down the PVC pipe in the pumphouse. Retrieve the cord from under the pool and place it in the groove located at the bottom of the pool. Leave enough slack in the power cord so the pump rests on the bottom of the pumphouse.
4. Slip the rubber stopper onto the power cord with the smaller end facing away from the pump. Insert the rubber stopper into the PVC pipe. Make sure the pumphouse is seated on the bottom of the pumphouse. Adjust the position of the rubber stopper if necessary.
5. Remove the brick from underneath the pool.
6. Check to see if the pool is leveled. Place a level on top of the pumphouse located in the center of the pool. Level in all directions. Shim if needed.
7. Find the shell finial and lay it on a padded surface on its side. Remove any tape or debris from inside the PVC pipe located at the bottom of the shell finial. Cut the 3/4" tubing to 19" long. Attach the 18" long piece of tubing to the outlet of the pump. Insert the other end of the tubing through the PVC pipe of the shell finial. Carefully pick up the shell finial and place it on top of the pumphouse located in the middle of the pool.
8. Check to see if the shell finial is leveled. Place a level on top of the shell finial. Level in all directions. Shim if needed.
9. Find the pool plug and place it in the opening of the pumphouse.
10. Fill the pool and shell finial with water.
11. Plug the pump into a GFCI protected outlet.
12. You may need to adjust the water flow. To do so use the flow control dial located on the front of the pump.