

## SET UP INSTRUCTIONS 3548 SPRINGTIME GARDEN FOUNTAIN

Open the bag containing the pump kit **P130LS**. In the kit you will find:

1 - 40160 (160 gallon per hour pump) 1 - 12" long piece of 1/2" clear tubing 1 - brass spigot

1 - hose clamp

1. Find the pump and attach the 1/2" clear tubing 12" long to the outlet side of the pump with the hose clamp. Adjust the dial flow control on the front of the pump to the full open position.

1 - silicone tube

- 2. Place fountain base on a firm and level area where fountain will remain. Place the pump and tubing assembly in the pump house located in the shell. Place the power cord in the groove located in rear of fountain.
- 3. Find the fountain column. On a padded surface lay the fountain column on its back. Located in the base of the fountain column you will see copper pipe. Remove any excess concrete and or tape from the copper pipe. Trim the 1/2" clear tubing to the proper length. Place a piece of padding on rear of fountain base. Place the fountain column on the fountain base. Have one person tilt and hold the fountain wall piece and another person attach the 1/2" clear tubing to the copper pipe located in the bottom of the fountain column. Position the fountain column on the fountain base with the spigot insert on the bowl side of the fountain. Remove padding.
- 4. Find the brass spigot. The brass spigot will thread into the spigot insert located in the fountain column. Remove any excess concrete and or tape from inside the spigot insert. Find the brass spigot. The brass spigot will thread into the spigot insert located in the fountain wall piece. Remove any excess concrete and or tape from inside the spigot insert. Find the tube of silicone and open. Apply silicone onto the threads of the brass spigot. Carefully thread the brass spigot hand tight into the spigot insert. If necessary back off the brass spigot so it will be straight.
- 5. Find the drain plug and insert snugly into the drain insert located in the shell portion of the fountain. Fill the shell with tap water and plug pump into a 110VAC GFCI protected outlet. Adjust water flow using the brass spigot until the desired result is achieved.

12/20/06 3543sup