

SET UP INSTRUCTIONS 3552 70" CLASSIC LION HEAD FOUNTAIN WITH POOL

Open the bag containing the pump kit **P460M**. In the kit you will find:

- 1 40460 (460 gallon per hour pump) 1 rubber stopper
- 1 65" long piece of 3/4" clear tubing
- 1. Place pool on a firm and level area where fountain will remain. Place a brick under one side of pool to help you retrieve the pump power cord.
- 2. Find the pump and the rubber stopper. Place the pump near the pump house located in the center of pool. Run the plug end of the power cord down the PVC pipe located in the pump house. Retrieve cord from under pool and place in groove in bottom of pool. Slip the rubber stopper onto the power cord about 12" from the pump. Insert the rubber stopper snugly into the PVC pipe. Place the pump in the pump house. Remove brick from under pool and level.
- 3. To level pool, place the level on the top rim of the pump house in the center of the pool. Level in (2) Two directions left to right and front to back. **Shim if needed.**
- 4. Place a piece of padding on the pump house in the center of the pool. Find the pedestal and the piece of 3/4" clear tubing 65" long. Place the pedestal on the pump house. Run one end of the 3/4" clear tubing down the hole that is in the pedestal. **Carefully** tilt the pedestal and attach the 3/4" clear tubing to the outlet side of pump. Remove padding. Position the pedestal on the pump house and level. To level pedestal place the level on top of pedestal. Level as stated in step #3.
- 5. Find the large shell and run the 3/4" clear tubing up and thru the hole in the center housing of the shell and place the shell on the pedestal. Make sure that the 3/4" clear tubing is free of kinks. Position the shell on the pedestal and level. To level shell, place the level on center housing of the shell. Level as stated in step #3.
- 6. Find the second shell and run the 3/4" clear tubing up and thru the hole in the center housing of the shell and position the shell on the large shell and level. To level shell, place the level on the top rim of the shell. Level as stated in step #3.
- 7. Trim the 3/4" clear tubing 7 1/2" above the center housing of the second shell. Find the finial and slip it onto the 3/4" clear tubing. Position the finial on the center housing of the shell.
- 8. Find the drain plugs and insert snugly into the drain inserts located in the pool and the shell portion of the fountain. Remove any tape and or dirt from inside the drain insert before you insert the drain plug. Fill pool and shells with tap water and plug pump into a 110VAC GFCI protected outlet. To adjust the water flow to the finial, unplug the pump and remove the finial from the fountain. Trim the 3/4" clear tubing another 1/2" shorter and reposition the finial on the fountain. If necessary, repeat. This will regulate water flow from the finial until the desired result is achieved.

3552sup 4/5/11