©2011 Massarelli's Lawn Ornaments, Inc

How To Set Up Your Fountain

TYPE "C" SINGLE TIER CIRCULAR FOUNTAIN SET UP

- 1. Place the pedestal on a firm and level surface where fountain will remain. Level in (2) Two direction left to right and front to back. Shim as needed. Place the shell on the pedestal.
- 2. Attach the clear tubing to the outlet side of the pump with a hose clamp. Place the pump in the pump house in the center of the shell and run the plug end of the electrical cord down the PVC pipe in the pump house and down thru the pedestal. Slip the rubber stopper onto the power cord with the smaller end facing away from the pump. Insert the rubber stopper snugly into the PVC pipe. Make sure the pump is seated on the bottom of the pump house. Adjust the position of the rubber stopper on the power cord if necessary.
- 3. Position the shell on the pedestal and level. To level the shell, place the level on the top rim of the pump house in the center of the shell. Level in (2) Two directions left to right and front to back. Shim as needed.
- 4. If your pump kit supplied with a restrictor clamp attach to clear tubing. Most pumps have a built in adjustable dial flow control.
- 5. Remove any excess concrete or tape from both ends of copper pipe in the statue or finial.
- 6. Cut clear tubing to the length needed to operate fountain properly. Tubing that is too long will cause it to kink restricting the water flow. Tubing too short may hold the pump above the water line limiting the volume of water to the pump.
- 7. Attach clear tubing to the statue or finial and place on top of fountain.
- 8. Fill shell with water and plug pump into an 110VAC GFCI protected outlet.
- 9. If fountain needs adjustment, unplug pump and adjust the restrictor or the flow control on the pump to regulate the water flow of the statue of finial until the desired result is achieved.



