

SET UP INSTRUCTIONS 3663 SEVEN TIER GOZO FOUNTAIN ON PEDESTAL

Open the bag containing the pump kit **P29016.** In the kit you will find:

1 - rubber stopper

1 - 27" long piece of 3/4" clear tubing

1 – KING 400 (400 gallon per hour pump)

1. Place the pedestal on a firm and level area where fountain will remain. Place the fountain shell on the pedestal.

2. Find the pump, the 3/4" clear tubing 27" long, and the rubber stopper. Attach the piece of 3/4" clear tubing 27" long to the outlet side of pump. Place the pump in the pump house located in the center of the shell. Run the plug end of the power cord down the PVC pipe located in the pump house and down through the pedestal. Retrieve cord from under the pedestal and place in groove in bottom of pedestal. Slip the rubber stopper onto the power cord with the smaller end facing away from the pump. Insert the rubber stopper snugly into the PVC pipe. Make sure the pump is seated on the bottom of the pump house. Adjust the position of the rubber stopper on the power cord if necessary.

3. Position the fountain shell on the pedestal and level. To level the fountain shell, place the level on the top rim of the pump house located in the center of the shell. Level in (2) Two directions left to right and front to back. **Shim if needed.**

4. Find the drain plug and insert snugly into the drain insert located in the fountain shell.

5. Find the round disc spacer. Run the 3/4" clear tubing up thru the center hole and position it on the pumphouse located in the center of the fountain shell.

6. Starting with the largest to the smallest shell, stack and position each shell on the fountain running the 3/4" clear tubing up through the hole located in the center of each shell. Level each shell as stated in step 3.

Each shell is marked with the item number in the center of the shell.

3116S is SHELL #1
3114S is SHELL #2
3113S is SHELL #3
3104S is SHELL #4
3103S is SHELL #5 After you have positioned the shell #5 on the fountain cut the 3/4" clear tubing four inches above the center housing of that shell. Position the last two shells onto the fountain.
3102S is SHELL #6
3101S is SHELL #7

7. Fill each shell with tap water and plug pump into a 110VAC GFCI protected outlet. Adjust water flow to the statue or finial using the dial type flow control located on the front of the pump until the desired result is achieved.

3663sup 3/19/09