

SET UP INSTRUCTIONS 3671 FOUR TIER GOZO FOUNTAIN ON PETAL POOL

Open the bag containing the pump kit **P22503.** In the kit you will find:

1 –40225 (225 gallon per hour pump)

1 - rubber stopper

1 - 27" long piece of 3/4" clear tubing

- 1. Place the pool on a firm and level area where fountain will remain.
- 2. Find the pump, the 3/4" clear tubing 27" long and the rubber stopper. Attach the piece of 3/4" clear tubing 27" long onto the outlet side of the pump. Place the pump in the pump house located in the center of pool. Run the plug end of the power cord down the PVC pipe located in the pump house. Retrieve cord from under pool and place in groove in bottom of pool. Slip the rubber stopper onto the power cord with the smaller end facing away from the pump. Insert the rubber stopper snugly into the PVC pipe. Make sure the pump is seated on the bottom of the pump house. Adjust the position of the rubber stopper on the power cord if necessary.
- 3. To level pool, place the level on the top rim of the pump house located in the center of the pool. Level in (2) Two directions left to right and front to back. **Shim if needed.**
- 4. Find the drain plug and insert snugly into the drain insert located in the pool portion of the fountain. Remove any tape and or dirt from the drain insert before you insert the drain plug.
- 5. Find the round disc spacer. Run the 3/4" clear tubing up thru the center hole and position it on the pumphouse located in the center of the pool.
- 6. Starting with the largest to the smallest shell, stack and position each shell on the fountain running the 3/4" clear tubing up through the hole located in the center of each shell. Level each shell as stated in step 3.

Each shell is marked with the item number in the center of the shell.

3104S is SHELL #1

3103S is SHELL #2

After you have positioned shell #2 on the fountain cut the 3/4" clear tubing four inches above the center housing of that shell. Position the last two shells onto the fountain.

3102S is SHELL #3

3101S is SHELL #4

7. Fill each shell and the pool with tap water and plug pump into a 110VAC GFCI protected outlet. Adjust water flow to the statue or finial using the dial type flow control located on the front of the pump until the desired result is achieved.

3671sup 6/2/10