

SET UP INSTRUCTIONS

3763 – ONE PIECE GRACEFUL DISH FOUNTAIN

Open the bag containing the pump kit **P7508**. In the kit you will find:

1 - 40075 (75 gallon per hour pump)	1 – rubber stopper	1 – tube of silicone
1 – 1/2" clear tubing 3 1/2" long	1 – hose clamp	

1. Find the fountain base, the pump and the rubber stopper. Slip the rubber stopper onto the power cord of the pump about 6" from the body of the pump with the smaller end facing away from the pump. Run the plug end on the power cord down the PVC insert located in the center of the fountain base and out the bottom of the fountain base. Retrieve the power cord from under the fountain base and place in the groove in the bottom of the fountain base.

Find the tube of silicone. For a watertight seal apply silicone around the top inside edge of the PVC insert and around the outside edge of the rubber stopper. Insert the rubber stopper snugly into the PVC insert. Apply more silicone around the top of the rubber stopper and the wire.

2. Place the fountain base on a firm and level area where the fountain will remain.

3. Find the 1/2" clear tubing and the hose clamp. Attach one end of the 1/2" tubing to the outlet side of the pump with the hose clamp. Connect the opposite end of the 1/2" tubing to the copper pipe located in the base of the taller shell.

4. Find the pump cover and position it over top of the pump.

5. Fill the fountain base with 5" of tap water. Plug the pump into a 110VAC GFCI protected outlet. To adjust water flow to the fountain top piece use the built in dial type flow control located on the front of the pump.