

## **SET UP INSTRUCTIONS**

## 3849 18" ROUND AZUSA BUTTERFLY FOUNTAIN

Open bag containing the pump kit P13015. In the kit you will find:

1 - 40160 (160 gallon per hour pump)

1 - 4" putty tape

1 - LED light kit (white)

1 - 20" long piece of 1/2" kink free tubing

1 - 2-hole rubber stopper

1 - hose clamp

- 1. Place the container base on a firm and level surface where fountain will remain.
- 2. Find the pump, the LED light kit and the 2-hole rubber stopper. Slip the 2-hole rubber stopper onto the power cord of the pump and the power cord of the LED light kit. Position the 2-hole rubber stopper about 12" from the body of the pump and about 25" from the LED light.
- 3. Place the pump and the LED light in the container base and run the plug end of both power cords down the hole located in the bottom. Retrieve both power cords from under the container base and place in groove in bottom of the container base. Insert the 2-hole rubber stopper snugly into the hole located in the bottom of the container base.
- 4. Find the piece of 1/2" kink free tubing 20" long and hose clamp. Attach the piece of 1/2" kink free tubing to the outlet side of the pump with the hose clamp. Insert the LED light head into the opposite end of the 1/2" kink free tubing. Place the pump in the pumphouse with the tubing assembly facing up
- 5. Find the pump cover. In the center of the pump cover there is a PVC pipe. Remove any excess concrete or tape from both ends of this PVC pipe. **CAREFULLY** guide the LED light head up through the center hole and place the pump cover onto the container base. Position the pump cover on the container base.
- 6. The LED light head will extend beyond the hole in the pump cover. **Carefully** push the LED light head down into the hole in the pump cover lining up the housing around the LED lights with the top edge of the pump cover. If necessary, trim the length of the 1/2" kink free tubing.
- 7. Connect the power cord on the LED light to the transformer. Fill the container base with 10" of water and plug both the pump and the LED light transformer into a 110VAC GFCI protected outlet. Adjust the water flow to the finial using the built in flow control dial on the front of the pump.

3846sup 12/16/10