

SET UP INSTRUCTIONS 3852 72" THREE TIER RENAULT FOUNTAIN

Open bag containing the pump kit **P46008**. In the kit you will find:

1 - 40460 (460 gallon per hour pump)

1 - hose clamp

1 - 2" long piece of 3/4" clear tubing

1 – rubber stopper

- 1 48" long piece of 1" clear tubing
- 1. Place the pedestal on a firm and level surface where fountain will remain and level. To level pedestal, place level on the top rim of the pedestal. Level in (2) Two directions left to right and front to back. Shim as needed. Place the largest shell on the ground near the pedestal.
- 2. Find the pump and the rubber stopper. Place pump in the pumphouse located in the center of the large shell and run the plug end of the power cord down PVC pipe located in the pumphouse. Retrieve the power cord from under shell. Run the power cord down the hole that is through the pedestal. Retrieve the power cord through the access hole in the bottom of the pedestal. Place the largest shell on the pedestal. While placing the shell on the pedestal carefully pull the remainder of the power cord until all is hidden inside the fountain. Slip the rubber stopper onto the power cord about 15" from the pump. Insert the rubber stopper snugly into the PVC pipe.
- 3. Find the 3/4" clear tubing 2" long, 1" clear tubing 48" long, rubber stopper, hose clamp. Slip the piece of 3/4" clear tubing 2" long onto the outlet side of the pump. Then over top of the 3/4" clear tubing slip on the 1" clear tubing 48" long and attach with the hose clamp.
- 4. Position the largest shell on pedestal and level. To level shell, place level on the top rim of the pump house in the center of shell. Level in (2) Two directions left to right and front to back. Shim as needed.
- 5. Find the larger spacer that is 10" high. Run the 1" clear tubing through the center hole in spacer. Place spacer on top of pumphouse in center of shell and level as stated in step #4.
- 6. Find the second shell and run the 1" clear tubing up thru the hole in the center housing of the shell. Position shell on top of the spacer and level. To level shell, place level on center housing in center of shell. Level as stated in step #4.
- 7. Find the smaller spacer that is 7" high. Run the 1" clear tubing through the center hole in spacer. Place spacer on top of center housing in center of shell and level as stated in step #4.
- 8. Find the third shell and run the 1" clear tubing up thru the hole in the center housing of the shell. Position shell on top of the spacer and level. To level shell, place level on center housing in center of shell. Level as stated in step #4. Cut the 1" clear tubing 12" above the top surface of the center housing on the third shell.
- 9. Find the finial and remove any excess concrete or tape from inside and both ends of the PVC pipe located in the center of the finial. Before placing the finial on the fountain. Cut the 1" clear tubing 12" above the top surface of the center housing on the third shell. Slide the 1" clear tubing into the finial and position finial on top of fountain.
- 10. Find the drain plugs and insert snugly into the drain inserts located in the two shells of the fountain. Remove any tape and or dirt from the drain insert before you insert the drain plug.
- 11. Fill shells with tap water and plug the pump into a 110VAC GFCI protected outlet. Adjust the water flow to the finial using the dial type flow control located on the front of the pump until the desired result is achieved.

 3852sup 5/25/10