

## SET UP INSTRUCTIONS

**3983 30" FERN LEAF FLEUR DE LIS FOUNTAIN**

**3855 30" CHELSEA FLEUR DE LIS SQUARE FOUNTAIN**

**3860 30" CHELSEA FLEUR DE LIS HEXAGON FOUNTAIN**

**3865 30" CHELSEA FLEUR DE LIS ROUND FOUNTAIN**

**3870 30" CHELSEA FLEUR DE LIS FLUTED FOUNTAIN**

Open bag containing the pump kit **P7506**. In the kit you will find:

1 - 40075 (75 gallon per hour pump)

1 - rubber stopper

1 – clear nozzle kit

1 - 4" long piece of 1/2" kink free tubing

1 - hose clamp

1. Place the pedestal on a firm and level surface where fountain will remain. Place the shell on the pedestal.
2. Find the pump and the rubber stopper. Slip the rubber stopper onto the power cord with the smaller end facing away from the pump. **Position the rubber stopper about 7" from the body of the pump.** Place pump in the pump house in center of the shell and run the plug end of the electrical cord down the hole located in the center of the pump house and down through the pedestal. Retrieve cord from under pedestal and place in the groove in the bottom of pedestal. Insert the rubber stopper snugly into the hole. Position the shell on the pedestal and level. To level shell, place level on the top rim of the shell. Level in (2) Two directions left to right and front to back. **Shim as needed.**
3. Find the piece of 1/2" kink free tubing 4" long and hose clamp. Attach the piece of 1/2" kink free tubing 4" long onto the outlet side of the pump with a hose clamp. Adjust the dial type flow control located on the front of the pump to the half open position (+).
4. Find the finial. In the base of the finial you will see a copper pipe. Remove any excess concrete or tape from both ends of this copper pipe.
5. Attach the piece of 1/2" kink free tubing to the copper pipe located in the base of the finial. Position the finial in the center of shell.
6. Find the clear nozzle kit. Slip the clear nozzle onto the copper pipe that is on top of the finial. If needed apply a small amount of clear silicone (not supplied) around the copper pipe that is on the top of the finial before you slip on the clear nozzle.
7. Fill the shell with water and plug pump into a 110VAC GFCI protected outlet. Adjust the water flow to the finial using the built in flow control dial on the front of the pump.

**3983sup 2/23/11**