


# How To Set Up Your Fountain

## TYPE "D" MULTI-TIER CIRCULAR FOUNTAIN SET UP

1. Place the pedestal on a firm and level surface where fountain will remain. Level in (2) Two directions left to right and front to back. Shim as needed. Place the largest shell on the pedestal.
2. Attach the clear tubing to the outlet side of the pump with a hose clamp. Place the pump in the pump house in the center of the shell and run the plug end of the electrical cord down the PVC pipe into the pump house and down thru the pedestal. Slip the rubber stopper onto the power cord with the smaller end facing away from the pump. Insert the rubber stopper snugly into the PVC pipe. Make sure the pump is seated on the bottom of the pump house. Adjust the position of the rubber stopper on the power cord if necessary.
3. Position the largest shell on the pedestal and level. To level the shell, place the level on the top rim of the pump house in the center of the shell. Level in (2) Two directions left to right and back to front. Shim as needed.
4. Take the next shell and run the clear tubing up thru the PVC insert in the center housing of the shell and place on fountain. Make Sure the Clear tubing Does Not Kink or Get Sandwiched Between Shells while shell is being positioned. To level shell, place level on center housing in the center of the shell. Level as stated in step #3.
5. Repeat step #4 for the remaining shells.
6. If your pump kit is supplied with a restrictor clamp attach to clear tubing. Most pumps have a built in adjustable dial flow control.
7. Remove any excess concrete or tape from both ends of copper pipe in the statue or finial.
8. Cut clear tubing to the length needed to operate fountain properly. Tubing that is too long will cause it to kink restricting the water flow. Tubing too short may hold the pump above the water line limiting the volume of water to the pump.
9. Attach clear tubing to the statue or finial and place on top of fountain.
10. Fill shells with water and plug into an 110VAC GFCI protected outlet.
11. If fountain needs adjustment, unplug pump and adjust the restrictor or the flow control on the pump to regulate the water flow of the statue or finial until the desired result is achieved.

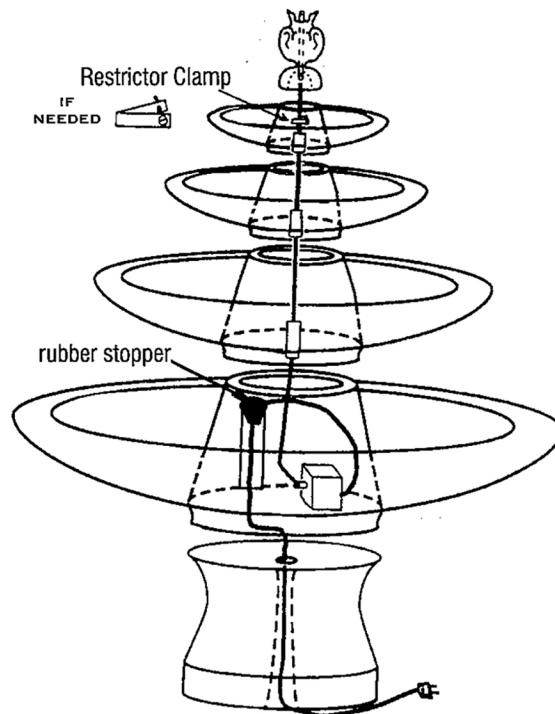

**MASSARELLI'S®**  
*MAKERS OF FINE STONE GARDEN ACCENTS*

500 South Egg Harbor Road  
Hammonton, NJ 08037  
Toll-Free Telephone 888-567-8300 • Toll-Free Fax 800-997-3278  
[www.Massarelli.com](http://www.Massarelli.com)