



# MASSARELLI'S®

MAKERS OF FINE STONE GARDEN ACCENTS

## SET UP INSTRUCTIONS

### 3502 – LIDO FOUNTAIN

### 3498 – LIDO BUTTERFLY FOUNTAIN

Open the bag containing the pump kit **P22516**. In the kit you will find:

1 - 40225 (225 gallon per hour pump)	1 – butyl tape 6” long (not used)	1 - hose clamp
1 – 3/4" clear tubing 10” long	1 – LED light kit (white)	1 – tube of silicone
1 – 2-hole rubber stopper		

1. Find the fountain pool. On a padded surface **CAREFULLY** stand the fountain pool on its side. Have a helper steady the pool. Find the pump, LED light kit and 2-hole rubber stopper. Slip the 2-hole rubber stopper onto the power cord of the pump and the power cord of the LED light. Position the 2-hole rubber stopper about 10” from the body of the pump and on the LED power cord about 20” from the LED light head. Remove the ½” barbed connection from the LED light head.

2. In the rear of the fountain pool there is a PVC insert. Clean any dirt and or excess concrete from the PVC insert. Run the plug end of power cords, of the pump and the LED light, through the PVC insert and out the back side of the fountain pool.

Find the tube of silicone. For a watertight seal apply silicone around the top inside edge of the PVC insert and around the outside edge of the rubber stopper. Insert the 2-hole rubber stopper snugly into the PVC insert. Apply more silicone on top and around the rubber stopper and the power cords. **Don't skimp on the silicone you want a watertight seal.**

Retrieve the power cords from the bottom of the fountain pool and place in the groove in the bottom of the fountain pool. Place the fountain pool on a firm and level area where the fountain will remain.

3. Find the 3/4" clear tubing 10" long and the hose clamp. Attach the 3/4" clear tubing to the outlet side of the pump with the hose clamp. Approximately in the center of the pool you will find a copper pipe. **Position the LED light head on this copper pipe.**

4. Place the pump in the pump house. Find the drain plug and insert snugly into the drain insert located in the fountain pool. Remove any tape and or dirt from the drain insert before you insert the drain plug.

5. Find the finial. In the bottom of the finial there is a PVC pipe. Clean any dirt and or excess concrete from the inside PVC pipe. Insert the end of the 3/4" clear tubing into the PVC pipe about 7". Place the finial on the pump house located in the pool. Reach in the pump house opening and position the pump with the dial type flow control facing the front of the fountain and seated on the floor of the fountain pool. Position the dial type flow control to the vertical position.

6. **Fill the fountain pool with tap water.** Connect the power cord on the LED light to the transformer. Plug both the pump and the LED light transformer into a 110VAC GFCI protected outlet. Adjust the water flow using the built in flow control dial on the front of the pump.

Place the pump house plug in the pump house opening.

3502sup 1/27/16

3498sup 4/23/19