



MASSARELLI'S®

MAKERS OF FINE STONE GARDEN ACCENTS

SET UP INSTRUCTIONS

3503 – OPAL FOUNTAIN ON OCTAGONAL POOL

Open bag containing the pump kit **P22517**. In the kit you will find:

- | | |
|--------------------------------------|----------------------|
| 1 - 40225 (225 gallon per hour pump) | 1 – rubber stopper |
| 1 – 3/4" clear tubing 44" long | 1 – tube of silicone |

1. Find the pool, the pump and the rubber stopper. Before you set the pool in position, run the power cord of the pump down the PVC insert located in the center of the pool. Retrieve cord from under the pool. Leave about 12" of slack on the power cord inside the pool. Find the tube of silicone adhesive. Apply a dab of silicone in the hole in the rubber stopper. Slip the rubber stopper onto the power cord about 12" from the pump with the smaller end facing away from the pump. Apply the silicone around the inside edge of the PVC insert and around the outside edge of the rubber stopper. Insert the rubber stopper snugly into the PVC insert. Apply more silicone on top and around the rubber stopper and around the power cord. Don't skimp on the silicone you want a watertight seal.
2. Position the pool on a firm and level surface where fountain will remain. Place the power cord in groove in the bottom of the pool. To level the pool, place the level on the outside rim of the pool and level in all directions. Shim as needed. Find the pump house and position it in the center of the pool around the pump.
3. Find the 3/4" clear tubing 44" long and the pedestal. Connect one end of the 3/4" clear tubing onto the outlet side of the pump. Run the piece of 3/4" clear tubing up thru the hole located in the bottom of the pedestal. Position the pedestal centered on top of the pump house located in the center of the pool.
4. Find the larger shell and run the 3/4" clear tubing up thru the hole in the center housing of the shell. Position the shell on top of the pedestal and level in all directions.
5. Find the smaller shell and run the 3/4" clear tubing up thru the hole in the center housing of the shell. Position the shell on top of the larger shell and level in all directions.
6. **Cut the 3/4" clear tubing 5" above the top surface of the center housing on the smaller shell.** Find the finial. Insert the 3/4" clear tubing into the hole in the bottom of the finial and slide the finial down onto the center housing of the shell. Position the finial on the fountain.
7. Find the drain plugs and insert snugly into the drain inserts located in the larger shell and the pool of the fountain. Remove any tape and or dirt from the drain insert before you insert the drain plug. Fill both shells and the pool with tap water and plug pump into a 110VAC GFCI protected outlet.
8. To adjust the water flow use the dial type flow control located on the front of the pump. This will regulate water flow from the finial until the desired result is achieved. Find the pump house plug and position it in the opening in the pump house.

3503sup

6/15/18