



MASSARELLI'S®

MAKERS OF FINE STONE GARDEN ACCENTS

SET UP INSTRUCTIONS

3515 – 64" TRANQUILLITY SPHERE FTN WITH SURROUND AND 6' FIBERGLASS POOL

Open bag containing the pump kit **P46017**. In the kit you will find:

- | | | |
|---------------------------------------|----------------------|----------------|
| 1 - 40460 (460 gallons per hour pump) | 1 - tube of silicone | 1 – hose clamp |
| 1 - 3/4" clear tubing 60" long | 1 – rubber stopper | |

1. Prepare a level base of 4" poured concrete or 6" compacted crushed limestone. The completed 6' fiberglass pool has an outside base diameter of 84".
2. Find the 6' fiberglass pool. **This will be done for you. In the center of the pool there is a threaded insert. Find the 1 1/4" male adapter, apply Teflon tape on the threaded end and screw it into the threaded insert. Find the piece of 1 1/4" PVC pipe 1 1/4" long and glue it into the slip end of the 1 1/4" male adapter.** Find the pump and the rubber stopper. Slip the rubber stopper onto the power cord about 12" from the pump. Place the pump in the center of the pool and run the plug end of the power cord down through the PVC pipe in the center of the pool. Retrieve the power cord from bottom side of pool. Find the tube of silicone and apply around the inside edge of the PVC pipe and the outside edge of the rubber stopper. Insert the rubber stopper snugly into the PVC pipe in the center of the pool. Apply silicone on top and around the rubber stopper and power cord. **Don't skimp on the silicone you want a watertight seal.**
3. Place the 6' fiberglass pool in the center of the area where the fountain is to be displayed. Retrieve the power cord from bottom side of pool and place in the groove in the bottom of pool. Find the pedestal-pump house and carefully position it in the center of the pool. The opening in the pedestal-pump house should face toward back of fountain. Find the pedestal and carefully position it on top of the pedestal-pump house. Find the larger shell and position it on top of the pedestal. To level shell, place level on the top of the outside rim of the shell and level in all directions. Shim as needed.
4. Find the piece of 3/4" clear tubing 60" long and the hose clamp. Run one end of the 3/4" clear tubing down the hole that is in the center of the large shell and down through the hole in the center of the pedestal into the pedestal-pump house. Connect the 3/4" clear tubing to the outlet of the pump with the hose clamp. Position the pump in the pedestal-pump house with the dial type flow control facing the opening in the pump house.
5. Find the second shell and run the 3/4" clear tubing up thru the hole in the center housing of the shell. Position shell on top of the larger shell and level as stated in step #3. Check to make sure that the pump is seated on the floor of the pool inside the pump house.
6. Find the third shell and run the 3/4" clear tubing up thru the hole in the center housing of the shell. Position shell on top of the second shell and level as stated in step #3.
7. Find the drain plugs and insert snugly into the drain inserts located in the pool and the larger shell of the fountain. Remove any tape and or dirt from the drain insert before you insert the drain plug. Cut the 3/4" clear tubing 6" above the top surface of the center housing on the third shell. Find the finial spacer and position it around the center housing of the third shell. Slip the sphere finial onto the 3/4" clear tubing and position the sphere finial on top of finial spacer.
8. Find the four pool wall sections. Position each piece of the wall section around the fiberglass pool, lining up the inside radius of the wall section with the inside radius of the fiberglass pool.
9. Fill the pool and shells with tap water and plug pump into a 110VAC GFCI protected outlet. Adjust the water flow to the finial using the dial type flow control located on the front of the pump until the desired result is achieved. Find the pump house plug and position it in the pump house opening.

3515sup 6/15/18