



MASSARELLI'S®

MAKERS OF FINE STONE GARDEN ACCENTS

SET UP INSTRUCTIONS

3523 – 43" FALLING WATERS FOUNTAIN

Open bag containing the pump kit **P22513**. In the kit you will find:

1 – 40225 (225 gallon per hour pump)	1 – reducing female adaptor	1 - rubber stopper
1 – 3/4" kink free tubing 8" long	1 – 3/4" barb adaptor	

1. Place the pedestal on a firm and level surface where fountain will remain. Place and position the shell centered on the pedestal.
2. Find the pump, the 3/4" kink free tubing and the rubber stopper. Attach the 3/4" kink free tubing to the outlet side of the pump. Find the reducing female adaptor and the 3/4" barb adaptor and screw the two pieces together. Attach the barbed end of the 3/4" barb adaptor to the opposite end of the 3/4" kink free tubing.
3. Place pump and tubing assembly into the pump house located in center of the shell and run the plug end of the electrical cord down the PVC pipe located in the pump house and down thru the pedestal. Retrieve cord from under the pedestal and place in groove in bottom of pedestal. Slip the rubber stopper onto the power cord with the smaller end facing away from the pump. Insert the rubber stopper snugly into the PVC pipe. Position the pump on its side inside the pump house.
4. To level the fountain shell, place level on top rim of the pump house in the center of shell. Level in all directions. **Shim as needed.**
5. Find the finial. On a padded surface lay the finial on its side. On the bottom of the finial you will see a PVC pipe. Clean any excess concrete or tape from this PVC pipe. Place a piece of padding on the pump house. Place the finial on the pump house. Have one person tilt and hold the finial and another person connect the slip end of the reducing female adaptor onto the PVC pipe. Push the adaptor onto the PVC pipe until it bottoms out. Remove padding. Position the finial on the pump house.
6. Find the pipe cap. The pipe cap looks like a flat disc about 6" diameter and 3/4" thick with indentations on two sides. The item number #4995T is marked on the side. Place the pipe cap into the top cavity of the finial covering the water outlet. Find the drain plug and insert snugly into the drain insert located in the fountain shell. Remove any tape and or dirt from the drain insert before you insert the drain plug.
7. Fill the fountain shell with tap water. Plug the power cord of the pump into a 110VAC GFCI protected outlet. Adjust the water flow to the finial using the dial type flow control located on the front of the pump until the desired result is achieved. Find the pump house plug and position it in the pump house opening.

3523sup 12/15/17