



MASSARELLI'S®

MAKERS OF FINE STONE GARDEN ACCENTS

SET UP INSTRUCTIONS 3629 - 57" PETAL POINT FOUNTAIN

Open bag containing the pump kit **P29014**. In the kit you will find:

1 - 40160 (160 gallons per hour pump)	1 – 2-hole #7 rubber stopper	1 – hose clamp #6
1 – 1/2" clear tubing 17 1/2" long		1 – LED light kit (white)

1. Place the pedestal on a firm and level surface where the fountain will remain. Place the shell on the pedestal.
2. Find the pump, the 1/2" clear tubing, the 2-hole rubber stopper, the LED light kit and the hose clamp. Attach the piece of 1/2" clear tubing onto the outlet side of the pump with the hose clamp. Attach the opposite end of the 1/2" clear tubing to the LED light head. Slip the 2-hole rubber stopper onto the power cord of the pump about 10" from the body of the pump and onto the LED power cord about 24" from the LED light head.
3. Place the pump in the pump house located in the center of the shell. Run the plug end of both power cords down the PVC pipe located in the pump house and down through the hole in the pedestal. Retrieve both power cords from under pedestal and place in groove in the bottom of the pedestal. Insert the rubber stopper snugly into the PVC pipe.
4. Position the shell on the pedestal and level in all directions.
5. Place padding on the side of the pumphouse located in the center of the shell.
6. Find the petal point finial and carefully place it on the padding in the center of the shell. Run the LED light head and the 1/2" clear tubing up thru the PVC pipe in the bottom of the petal point finial and place it on the pumphouse of the shell. Remove the padding. Position the petal point finial centered on top of the pumphouse located in center of shell.
7. Fill the shell with tap water. Connect the power cord on the LED light to the transformer. Plug the power cord of the pump and the LED light transformer into a 110VAC GFCI protected outlet. To adjust the water flow to the finial there is a dial type flow control located on the front of the pump. If necessary, adjust the water flow to the finial until the desired result is achieved. Place the pump house plug in the pump house opening.

3629sup **1/7/20**