



MASSARELLI'S®

MAKERS OF FINE STONE GARDEN ACCENTS

SET UP INSTRUCTIONS

3806 – 36" CURVED WATER WALL FOUNTAIN

3802 – SEA TURTLE WATER WALL FOUNTAIN

Open the bag containing the pump kit **P22507**. In the kit you will find:

- | | | |
|---|--------------------------------|------------------------|
| 1 - 40225 (225 gallon per hour pump) | 1 - 3/4" NPT 1/2" BARB adaptor | 1 – 36 LED light white |
| 1 - 20" long piece of 1/2" kink free tubing | 1 – 3/4" elbow (SOC X FIPT) | |

1. Find the piece of 1/2" kink free tubing 20" long, the 3/4" NPT 1/2" BARB adaptor and the 3/4" elbow (SOC X FIPT). Screw the threaded end of the 3/4" NPT 1/2" BARB adaptor into the 3/4" elbow (SOC X FIPT). Attach one end of the 1/2" kink free tubing 20" long onto the 1/2" barb. This will be your tubing assembly.

2. Place the rectangular fountain pool on a firm and level area where the fountain will remain. Find the drain plug and insert snugly into the drain insert located in the rectangular fountain pool of the fountain. Remove any tape and or dirt from the drain insert before you insert the drain plug.

3. Find the pump and the LED light. Place the pump into the **front left corner** of the rectangular fountain pool. Place the LED light into the **front right corner** of the rectangular fountain pool. Leave some slack and run both power cords along the floor of the pool and out the groove that is in the rear wall of the rectangular fountain pool.

4. **Carefully**, on a piece of padding, lay the fountain wall piece on its back. On the bottom you will see a PVC pipe. Clean any excess concrete or tape from this pipe. Find the tubing assembly. Line up the elbow side of the tubing assembly with the PVC pipe that is in the bottom of the fountain wall piece. Push the elbow onto the PVC pipe.

5. Have two people **Carefully** stand and place the fountain wall piece onto the rear of the rectangular fountain pool. Carefully lower the fountain wall piece into the two locks located on both sides of the rectangular fountain pool. **Make sure the two power cords are still in the groove that is in the rear wall of the rectangular fountain pool.**

6. Rotate the elbow so that the 1/2" kink free tubing side is pointing towards the **front right corner** of the rectangular fountain pool. Move the LED light to the center of the fountain wall piece. Wrap the 1/2" kink free tubing around the inside of the rectangular fountain pool from the right corner to the left corner.

7. *Attach the end of the 1/2" kink free tubing to the outlet side of the pump. Position the pump lying face down in the **front left corner** of the rectangular fountain pool.*

8. Retrieve both power cords from behind the fountain. Connect the LED light power cord to the transformer.

9. Fill the rectangular fountain pool with tap water and plug the pump and the LED transformer into a 110VAC GFCI protected outlet. To adjust the water flow use the dial type flow control located on the front of the pump until the desired result is achieved.

10. Find the pump cover. Position the LED light so that it will shine up onto the center of the fountain wall piece. Position the pump cover on the front of the rectangular fountain pool.

3806sup 4/25/19

3802sup 4/25/19