



# MASSARELLI'S®

MAKERS OF FINE STONE GARDEN ACCENTS

## SET UP INSTRUCTIONS

### 3810 – BELIZE THREE SHELL FOUNTAIN

Open the bag containing the pump kit **P7511**. In the kit you will find:

- |                                     |                    |
|-------------------------------------|--------------------|
| 1 – 40075 (75 gallon per hour pump) | 1 – rubber stopper |
| 1 – 1/2" clear tubing 5" long       | 1 - hose clamp     |

1. Place the pedestal on a firm and level area where the fountain will remain. Place the fountain shell on the pedestal.
2. Find the pump, the 1/2" clear tubing 5" long, the rubber stopper and the hose clamp. Attach the piece of 1/2" clear tubing to the outlet side of the pump with the hose clamp. Run the plug end of the power cord down the PVC pipe located in the fountain shell and down thru the pedestal. Slip the rubber stopper onto the power cord about 6" from the body of the pump with the smaller end facing away from the pump. Insert the rubber stopper snugly into the PVC pipe. Retrieve the power cord from under pedestal and place in groove in bottom of pedestal.
3. Position the fountain shell on the pedestal and level in all directions. **Shim if needed.** Find the square pump house and position it centered in the fountain shell. Place the pump in the pump house.
4. Find finial. On a padded surface lay the finial on its side. On the bottom of the finial you will see a copper pipe. Clean any excess concrete and or tape from both ends of the copper pipe.
5. Connected to the pump is the piece of 1/2" clear tubing 5" long. Connect the opposite end of the 1/2" clear tubing to the copper pipe located in the bottom of the finial. If necessary, trim the clear tubing to the proper length. Position the finial centered on the pump house.
6. Find the drain plug and insert snugly into the drain insert located in the fountain shell. Remove any tape and or dirt from the drain insert before you insert the drain plug.
7. Fill the fountain bowl with tap water. Plug the pump into a 110VAC GFIC protected outlet. If necessary, adjust the water flow to the finial using the dial type flow control located on the front of the pump until the desired result is achieved. Find the pump house plug and position it in the pump house opening.

3810sup      4/23/19