



MASSARELLI'S®

MAKERS OF FINE STONE GARDEN ACCENTS

SET UP INSTRUCTIONS

3813 – HAPPY DAYS WHALE FOUNTAIN

Open the bag containing the pump kit **P16005**. In the kit you will find:

1 – 40160 (160 gallon per hour pump) 1 – rubber stopper 1 – hose clamp
1 - 1/2" clear tubing 8" long

1. Find the fountain pool. On a padded surface **CAREFULLY** stand the fountain pool on its side. Have a helper steady the pool for you. Find the pump and the rubber stopper. Slip the rubber stopper onto the power cord of the pump about 12" from the body of the pump with the smaller end facing away from the pump. Place the pump in the pump house located in the back center of the fountain pool. Run the plug end of the power cord down the PVC insert located in the pump house. Retrieve power cord from the back of the fountain pool and place in groove in bottom of the fountain pool. Insert the rubber stopper snugly into the PVC insert. Place the fountain pool on a firm and level area where fountain will remain.

2. Find the piece of 1/2" clear tubing 8" long and the hose clamp.
Trim the piece of 1/2" clear tubing to 5" long. Attach the piece of 1/2" clear tubing 5" long to the outlet side of pump with the hose clamp. Make sure the pump is seated on the bottom of the pump house.

3. To level pool, place the level on the top rim of the pool and level in all directions **shim if needed**.

4. Find statue or finial. On a padded surface lay the statue or finial on its back. On the bottom of the statue or finial you will see a copper pipe. Clean any excess concrete and or tape from this copper pipe.

5. Inside the pump house you will find the piece of 1/2" clear tubing 5" long that is connected to the pump. Connect the opposite end of the 1/2" clear tubing to the copper pipe located in the bottom of the statue or finial. Place a piece of padding on the pump house. Place the statue or finial on the pump house. Have a helper tilt and hold statue or finial and another person connect the 1/2" clear tubing to the copper connection located in the bottom of the statue or finial. Remove padding and position the statue of finial on the pump house.

6. Find the drain plug and insert snugly into the drain insert located in the fountain base shell. Remove any tape and or dirt from the drain insert before you insert the drain plug.

7. Fill the fountain pool with tap water. Plug the pump into a 110VAC GFCI protected outlet. Adjust water flow using the dial type flow control located on the front of the pump until the desired result is achieved. Find the pump house plug and place the plug in the opening in the pump house located in the fountain pool.

3813sup

5/10/19