

## SET UP INSTRUCTIONS

### 3816 – 60” GARDEN GLOW FOUNTAIN

Open the bag containing the pump kit **P40017**. In the kit you will find:

1 - 40400 (400 gallon per hour pump)	1 – 1" x 3/4" female adaptor	1 – rubber stopper
1 – 3/4" kink free tubing 7 1/2" long	1 – 3/4" barb adaptor	1 – tube of silicone

1. Find the fountain bowl, the pump and the rubber stopper. Slip the rubber stopper onto the power cord about 10" from the body of the pump with the smaller end facing away from the pump.
2. Run the plug end on power cord of the pump down the PVC insert located in the center of the fountain bowl and out the bottom of the fountain bowl. Retrieve the power cord from under the fountain bowl and place in the groove in the bottom of the fountain bowl.
3. Find the tube of silicone. **For a watertight seal apply silicone around the top inside edge of the PVC insert and around the outside edge of the rubber stopper. Insert the rubber stopper snugly into the PVC insert. Apply more silicone around the top of the rubber stopper and the wire.**
4. Find the drain plug and insert snugly into the drain insert located in the fountain bowl. Remove any tape and or dirt from the drain insert before you insert the drain plug.
5. Place the fountain bowl on a firm and level area where the fountain will remain.
6. Find the 3/4" kink free tubing and attach one end to the outlet side of the pump. Find the 1" X 3/4" female adaptor and the 3/4" barb adaptor and screw the two pieces together. Attach the barbed end of the 3/4" barb adaptor to the opposite end of the 3/4" kink free tubing.
7. Find the finial. On a padded surface, **CAREFULLY**, lay the finial on its side. In the bottom of the finial there is a PVC pipe. Clean any tape and or dirt from the PVC pipe. Place the finial on the pump house. **CAREFULLY**, connect the slip end of the 1" X 3/4" female adapter onto the PVC pipe. Push the adaptor onto the PVC pipe until it bottoms out. Position the finial on the pump house.
8. Find the pump house plug and position it in the pump house opening.
9. Fill the fountain bowl with tap water. Plug the pump into a 110VAC GFCI protected outlet. If necessary, adjust the water flow using the dial type flow control located on the front of the pump.

3816sup      5/13/20