

SET UP INSTRUCTIONS

3823 – MOUNTAIN SHRINE FOUNTAIN

Open the bag containing the pump kit **P16031**. In the kit you will find:

- | | |
|--------------------------------------|---------------------------|
| 1 - 40160 (160 gallon per hour pump) | 1 – LED light kit (white) |
| 1 – 1/2" tubing 1" long | 1 – hose clamp |
| 1 – 1/2" tubing 24" long | |
| 1 – 3/4" tubing 17" long | |

1. Place the fountain base on a firm and level area where the fountain will remain. Find the drain plug and insert snugly into the drain insert located in the fountain base. Remove any tape and or dirt from the drain insert before you insert the drain plug.
2. Find the pump, the piece of 1/2" tubing 1" long, the piece of 3/4" tubing 17" long and the hose clamp. Slip the piece of 1/2" tubing 1" long onto the outlet of the pump. Over top of the 1/2" tubing 1" long slip one end of the 3/4" tubing 17" long to the outlet side of the pump with the hose clamp. Place the pump with the tubing assembly in the fountain base.
3. Find the LED light kit and the piece of 1/2" tubing 24" long. Attach the piece of 1/2" tubing 24" long to the barbed fitting on the back side of the LED light. Place the LED light with tubing attached in the fountain base.
4. Place the power cords of the pump and the LED light in the groove and over the rear wall of the fountain base. Find the fountain top piece and **CAREFULLY**, position it on the rear wall of the fountain base. **CAREFULLY**, tip the fountain top piece to the rear of the fountain and insert the LED light into the larger PVC pipe. **CAREFULLY**, tip the fountain top piece to the rear of the fountain and insert the 3/4" tubing attached to the outlet of the pump into the smaller PVC pipe.
5. Find the pagoda base and place it on top of the fountain top piece. Find the pagoda top and place it on top of the pagoda base.
6. Fill the fountain base with tap water. Connect the power cord on the LED light to the transformer. Plug both the pump and the LED light transformer into a 110VAC GFCI protected outlet. To adjust water flow to the fountain top piece, use the dial type flow control located on the front of the pump.